

# Quick Start Guide

## Wireless Jack Transmitter

This Ramblegard transmitter needs to be paired with your existing receiver.

**RG5 Wireless Jack or RG45 Wireless Jack Fly.**

Follow the steps below to set up your equipment:



- 1.** ERASE MEMORY BEFORE PROGRAMMING:  
**Hold down the PROGRAM button for ~15secs.** The ERROR and STATUS LEDs will first flash quickly for several seconds, then slowly three times. The three slow flashes indicate the memory has been successfully erased.
- 2.** PAIR NEW & EXISTING DEVICES WITH JACK:  
**Hold down the PROGRAM button.** The ERROR and STATUS LEDs will turn on after a few seconds to indicate that the Jack is ready for programming.
- 3.** **Switch the transmitter from OFF to ON.** The STATUS LED will flash momentarily when a signal from a wireless transmitter is received.
- 4.** **Hold down the program button** again until ERROR and STATUS lights come back on. The lights should both go out after ~5s. If not, switch the transmitter OFF and then back on.

*\*You must program transmitters one at a time, following instructions above. The RG5 has memory slots for a maximum of two wireless pads, plus an additional three slots for other devices.*

**Ramblegard Technical Support Helpline:  
028 9448 3971**

